



# USER MANUAL HAX-100

## PARTS & FUNCTION

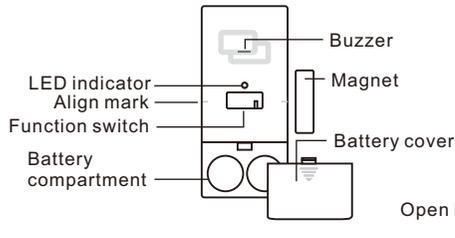

## BATTERY INSTALLATION

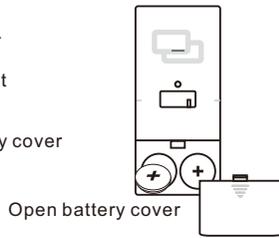

## CODE MATCHING & MELODY SELECTION

This magnetic sensor works with the receiver (chime or Vibrating Pager) And must be paired before using

Step 1: Insert 2 pcs CR2032 batteries to the sensor.

Step 2: Insert batteries to the receiver (chime).


Step 3: Enter pairing mode for receiver (chime unit).

Press and hold the ● zone selector button 3 seconds. The LED #1 will flash.

Step 4: Press the ● button again to move to the zone you want to pair with. Press 🎵 melody selector to scroll through the melodies. Once you hear your preferred melody, do not press again as it is now selected.

Step 5: Once you have selected the zone and melody, trigger the magnetic sensor by holding the sensor and magnet together, then move them apart.

If successful, the receiver will generate a short tone. Press the ● button to exit Pairing mode, the system is now ready to use.

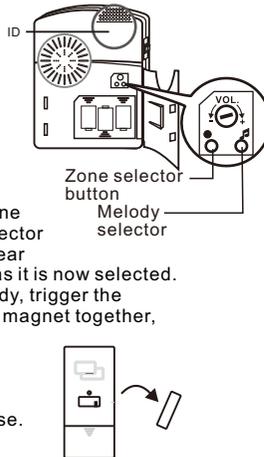


## MOUNTING

Install two CR2032 batteries to the battery compartment.

Remove the protective paper of the double sided tape on the back of the unit.

Stick the alarm unit to the window/door frame and the magnet unit to the door/window by the side of the alarm unit..

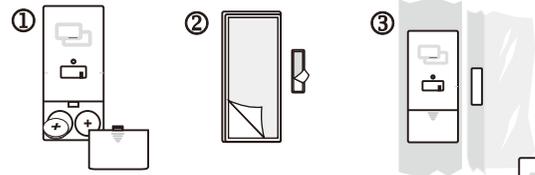

When the magnet moves away from the alarm unit, the alarm or bell will be activated and send out a signal to the receiver (chime).

## Alarm Mode


The alarm sound will automatically turn off after 15 seconds and sound again 30 seconds later if the door or window does not close.

## Bell Mode:


The bell will generate a Ding Dong tone and sound again 30 seconds later if the door does not close.

## BATTERY LOW INDICATOR

The status of sensor battery is indicated on the receiver. Please refer to the "battery low indicator" on the receiver.

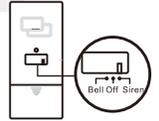

Using as alarm sensor:  
Slide the switch to siren position

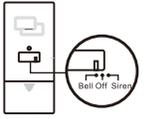

Using as visitor sensor:  
Slide the switch to bell position

## FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- \* Reorient or relocate the receiving antenna.
- \* Increase the separation between the equipment and receiver.
- \* Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note: Modifications to this product will void the user's authority to operate this equipment.**

