


User Manual

GLA-3000 Talking Keychain

Thank you for purchasing GUARDMAN® products. Please read the user manual carefully before use and keep it properly. We value your feedback and welcome you to share your experience with us

PARTS AND FUNCTION

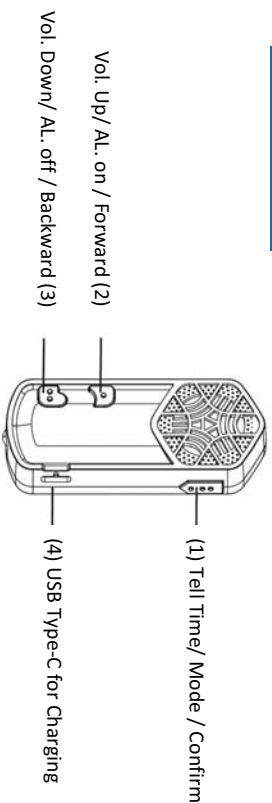

CHARGE

This talking clock is powered by a rechargeable battery. When the battery level is low, pressing the time announcement button will prompt a low battery warning to charge.

When plugged in for charging, it will also indicate "charging". Once charging is complete, it will announce "charging complete" every 10 minutes till unplugged the charging cable.

SETUP

Adjusting Date/Time/Alarm Time

- **Enter Adjustment Mode:** Long press the mode button (1) for 3 seconds.
- **Setting Sequence:** Time Format > Adjust Hour Hand > Adjust Minute Hand > Adjust Year > Adjust Month > Adjust Day > Adjust Alarm Hour Hand > Adjust Alarm Minute Hand > Alarm Function > Exit
- **Adjusting:** Use the "Forward" (2) and "Backward" (3) buttons to make adjustments. Press the confirm button (1) to move to the next item.

Adjusting Volume

There are 5 volume levels available for adjustment.

- **Increase Volume:** Short press the "Vol. Up" (2) button.
- **Decrease Volume:** Short press the "Vol. Down" (3) button.

OPERATION

Announce Time & Date

Short press the tell time button(1) once to tell the current time. Within 3 seconds, press it a second time to tell the date.

OPERATION

Quickly Turn On/Off Alarm and Check Alarm Time

Besides turning the alarm on or off in the setting mode, there is a quicker way to do so.

- **Quickly Turn On Alarm and Check Alarm Time:** Long press the "Forward" (2) button for 1.5 seconds.
- **Quickly Turn Off Alarm:** Long press the "Backward" (2) button for 1.5 seconds.

On/Off hourly time announcement

This device is set by default to announce the time at fixed intervals, specifically from 7 AM to 9 PM, on the hour. If you do not wish to be disturbed, you can temporarily disable this feature. Long press the time announcement button for 5 seconds until you hear two "Beep Beep" sounds, indicating that the hourly time announcement is turned off. This feature will automatically be re-enabled each time the device is charged.

Copy Right

The trademark is the property of **Guardman Products Limited** or its owner.

Copy right © 2020 Guardman Products Limited. All rights reserved.

Manufacturer:

GUARDMAN PRODUCTS LIMITED

Website: www.guardmanproducts.com

E-mail: info@guardmanproducts.com

Guardman product is in compliance with the CE, RED and FCC essential requirements

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Connect the equipment to part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: Modifications to this product will void the user's authority to operate this equipment.



After-sales warranty

GUARDMAN® provides limited-term product maintenance specifically for **production defects related to manufacturing processes or craftsmanship**. Please consult your local representative for inquiries. Maintenance does not cover issues or damages caused by natural disasters, misuse, improper usage, incorrect installation, human error, negligence, or inappropriate power supply.

GUARDMAN® disclaims responsibility for any direct, indirect, accidental, inevitable, or other losses. In addition to the above statement, all express, implied, and statutory warranties and non-infringement actions are disclaimed by **GUARDMAN®**.

For any questions, please contact our authorized distributor in your local area.

The information and specifications printed in this manual are accurate at the time of publication.

GUARDMAN® reserves the right to change prices, product designs, colors, and/or product specifications without prior notice. **GUARDMAN®** is also not responsible for printing errors or typographical mistakes.