


Parts & Function

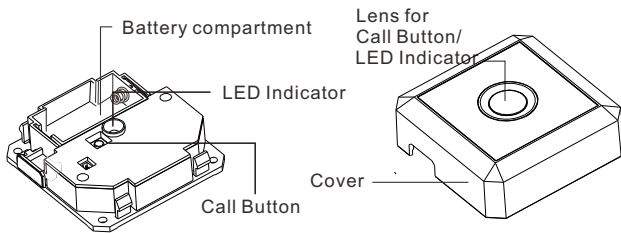


Power


This unit using a long life battery CR123A.

Battery installation

1. Open the front cover using a small screw driver
2. Take out the connection wire in the battery compartment.
3. Install a CR123A battery to the battery compartment

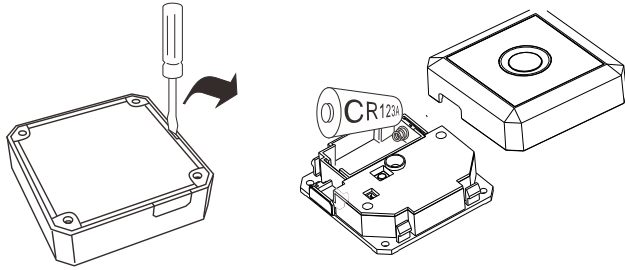

Installation

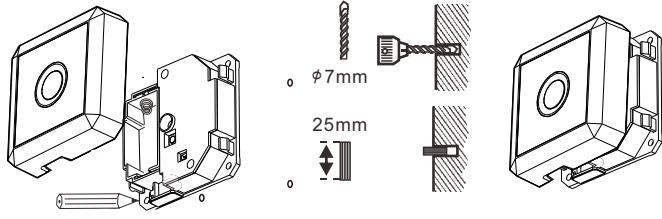


Mark the mounting holes on the wall using a pencil

Requires an electric drill for holes to fix the transmitter.

CODE PAIRING & MELODY SELECTION

- Step 1: Insert battery to the transmitter to be used.
- Step 2: Insert batteries to the receiver to be used (chime unit).
- Step 3: Enter pairing mode for receiver (chime unit).
Press and hold the ● zone Select button for 3 seconds.
The LED #1 will flash.
- Step 4: Press the ● button again to move to the zone you wish to pair with.
Press melody selector to scroll through the melodies.
Once you hear your preferred melody, do not press again as it is now selected.

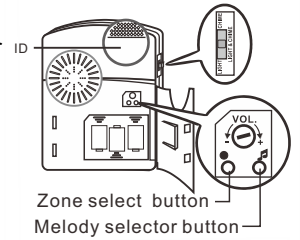

- Step 5: Once the zone and melody are selected, press the call button on the transmitter once to pair. If successful, the receiver (chime) will generate a short tone. Press the ● button to exit pairing mode, the system is ready to use.

To stop the Chime whilst it is alerting press the reset button

Test the transmitter

To test the transmitter, press the call button once. the LED indicator will lit and will send a trigger signal to the receiver.


Battery low indication

Once the transmitter unit detect battery voltage is low, the LED indicator will blink every 10 second. If the transmitter is activated, The battery low information will be sent to the receiver for display.

Code Conflict

If the transmitter coding is the same as another transmitter you must change the code. When you have changed the code re-pair the transmitter is needed.

Open the cover, Open the cover. Press and hold the test button, insert the battery whilst holding the button for 5 seconds. The LED will flash 5 times when a new code is generated

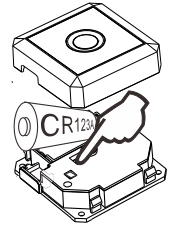

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
 - * Increase the separation between the equipment and receiver.
 - * Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: Modifications to this product will void the user's authority to operate this equipment.



RoHS

R&TTE

